

## USER MANUAL



**RN 400**  
USB BICYCLE LIGHT

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!


### IN THE BOX



RN 400



 Handlebar mount



Type-C USB Cable



3mm Hex



Aero bar compatible strap




Gopro mount

### SPECIFICATIONS

 
MODE	LOW	MID	HIGH	FLASH 1	FLASH 2
LUMENS	100	200	400	0-200	0-200
h:min	06:30	03:10	01:40	07:00	05:30

89m	1900cd	IPX7	1m	72*31*31mm 2.83*1.22*1.22in	85g / 3oz
-----	--------	------	----	--------------------------------	-----------

### HOW TO INSTALL

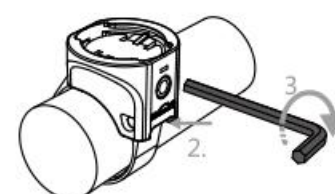

### HOW TO CHARGE

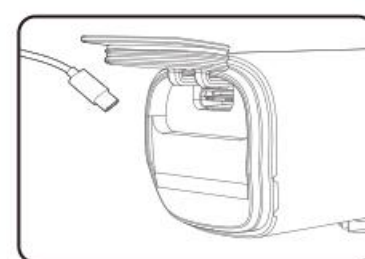 

Standard charging time: Approx. 2.5hrs (5V 1A)



Charging  
Red Blink




Fully Charged  
Green Constant

### BATTERY INDICATOR

 When the device is power-on, the power button light will indicate the battery level.

When the device is power-off, short press the power button to activate the indicator light (light will shut down automatically after 2 seconds).

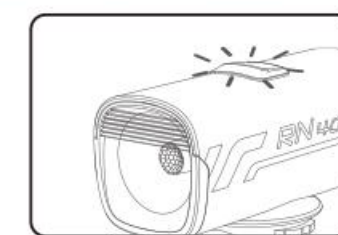

GREEN  
100%-21%



RED  
20%-11%



FLASH RED  
10%-0%



### DANGER

- DO NOT throw the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
- DO NOT cover the light head when the LED light is on, or place the LED light head on the ground. The radiation energy of the LED light may cause damage to the LED light itself, or even result in burning to flammable objects.

### WARNING

- Keep out of reach of children.
- The light contains a lithium-ion battery. Certain restrictions may apply to this product when traveling, especially when traveling by air. Always check with your carrier for specific restrictions prior to traveling with this product.

### NOTICE

- Store the light at room temperature in a dry place. Avoid moisture, or extreme hot or cold.
- Store the light in the charged condition. Avoid "deep discharge." Battery life will decrease if the light is stored in a fully discharged condition.
- Over time, the run time of the battery will diminish. Expect about 500 full charges, depending on care. After a full life, the battery will continue to charge but with a lower run time.
- When the run time is unsatisfactory, please recycle. Do not open the case of the light or incinerate.

### CONTENTS

( EN ) English	01
( CHS ) 简体中文	01
( NED ) Nederland	01
( DE ) Deutsch	01
( JP ) 日本語	02
( FR ) Français	02
( IT ) Italia	02

#### ( EN ) English

##### HOW TO OPERATE

Long press to turn on/off the light, click to change the brightness level and flash modes, and double click to switch modes. Mode memory function will save the last selected mode and brightness.

#### ( CHS ) 简体中文

##### 如何操作

长按开机 / 关机, 单击切换不同亮度或闪烁方式, 双击切换不同模式。再次开机进入上次关机时的模式及亮度。

#### ( NED ) Nederland

##### HOE TE BEDIENEN

Druk lang om het licht aan/uit te zetten, klik om het helderheidsniveau en de flits modi te veranderen en dubbelklik om tussen de modi te schakelen. De modus geheugenfunctie zal de laatste geselecteerde modus en helderheid opslaan.

#### ( DE ) Deutsch

##### BEDIENUNG

Gedrückt halten, um das Licht ein-/auszuschalten. Kurz Anklicken zum Umschalten der Helligkeitsstufe und Blitzmodi und Doppelklicken zum Umschalten der Modi. Die Modus-Speicherfunktion wird den zuletzt ausgewählten Modus und die Helligkeitsstufe speichern.

#### ( JP ) 日本語

##### 使用方法

ON/OFF ランプを長く押して、クリックして輝度のレベルとフラッシュモデルを変更し、ダブルクリックして SWITH モデルに切り替えます。モデルメモリ機能が最後のモデルと輝度の記録を残ります。

#### ( FR ) Français

##### COMMENT L'UTILISER

Appuyez longuement pour allumer/éteindre la lumière, cliquez pour changer le niveau de luminosité et les modes de flash, et double-cliquez pour basculer d'un mode à l'autre. La fonction de mémoire de mode enregistre le dernier mode et la dernière luminosité sélectionnés.

#### ( IT ) Italia

##### FUNZIONAMENTO

Premere a lungo per accendere / spegnere la luce, cliccare per modificare il livello di luminosità e le modalità flash e fare doppio clic per cambiare modalità. La funzione di memorizzazione della modalità salverà l'ultima modalità e luminosità selezionate.

### WARRANTY

**Within 30 days of purchase:** Return to the original seller for repair or replacement.

**Within 2 years of purchase:** Return to Olight for repair or replacement.

This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an authorized retailer or Olight itself.

**USA Customer Support**  
cs@olightstore.com

**Global Customer Support**  
customer-service@olightworld.com

Visit [www.olightworld.com](http://www.olightworld.com) to see our complete product line of portable illumination tools.

**Dongguan Olight E-Commerce Technology Co., Ltd**  
4th Floor, Building 4, Kegu Industrial Park, No 6 Zhongnan Road, Changan Town, Dongguan City, Guangdong, China.

Made in China

